

NIKON COOLPIX 3100





Quick Reference Guide

Basic Features



Turning the Camera On or Off

Rotate **On/Off** dial clockwise.




Taking a Picture

1. Select a mode on mode dial.
 - Select  to take basic pictures.
 - Select  to take night pictures.
 - Select  to take action pictures.
 - Select  to take landscape pictures.
2. Frame desired subject in viewfinder screen.
3. Press and release shutter-release button. Picture will appear in viewfinder screen.






Zooming

Press  to zoom in, press  to zoom out.






Viewing Pictures

1. Press  to display last picture on screen.
2. Press () or () to view another picture.










Using Flash

1. Rotate mode dial to one of the following: 
2. Press () to display flash mode menu.
3. Press () or () to highlight desired flash mode.
 - Automatic mode causes camera to automatically control when flash is used.
 - Red-eye mode reduces red-eye.
 - No-flash mode turns off flash.
 - Flash mode causes flash to always be used.
4. Press () to select desired flash mode.

Deleting a Specific Picture

1. Press  to display last picture on screen.
2. Press () to select picture to delete.
3. Press .
4. Press () to highlight **Yes**.
5. Press () to delete picture.

Deleting All Pictures

1. Press  to display last picture on screen.
2. Press .
3. Press () to display playback menu.
4. Press () to highlight **Delete**.
5. Press () to select **Delete**.
6. Press () to highlight **Erase All Images**.
7. Press () to select **Erase All Images**.
8. Press () to highlight **Yes**.
9. Press () to delete all pictures.





NIKON COOLPIX 3100

Quick Reference Guide

Advanced Features

Cropping Pictures

1. Press  to view pictures.
2. Press (▶) to find picture to change.
3. Press .
4. Press (▼) to highlight **Pic. Enhance Menu**.
5. Press (▶) to select **Pic. Enhance Menu**.
6. Press (▼) to highlight **Photo Trim**.
7. Press (▶) to select **Photo Trim**.
8. Press **T** or **W** to zoom in or out and (▶) to move around.
9. Press shutter-release button.
10. Press (▼) to highlight **Yes**.
11. Press (▶) to select **Yes** and confirm crop.



Transferring Pictures

Without Software

1. Turn mode dial to **SET UP**.
2. Press (▼) to highlight **USB**.
3. Press (▶) to select **USB**.
4. Press (▼) to highlight **Mass Storage**.
5. Press (▶) to select **Mass Storage**.
6. Turn camera off.
7. Connect camera to computer with included USB cable. See figure at right.
8. Turn camera on.
9. Press  to transfer pictures to view on computer screen.





Making a movie






1. Rotate mode dial to .
2. Press .
3. Press (▼) to highlight desired option.
 - Small Movie
 - TV Movie
 - Black and White Movie
 - Sepia Movie
4. Press (▶) to select option.
5. Press shutter-release button to start and stop recording.

Note: The Nikon Coolpix 3100 will only record up to 40 seconds and does not record sound.

Viewing a Movie

1. Rotate dial to .
2. Press .
3. Press **T** to start playback.
4. Press (◀) to rewind, and (▶) to fast forward.
5. Press **W** to stop playback.

Using the Timer

1. Rotate dial to one of the following:
    
2. Press (◀) to display timing menu.
3. Press (▼) to highlight **ON**.
4. Press (▶) to activate 10-second delay.
5. Press down on shutter-release button.

